


Model S14

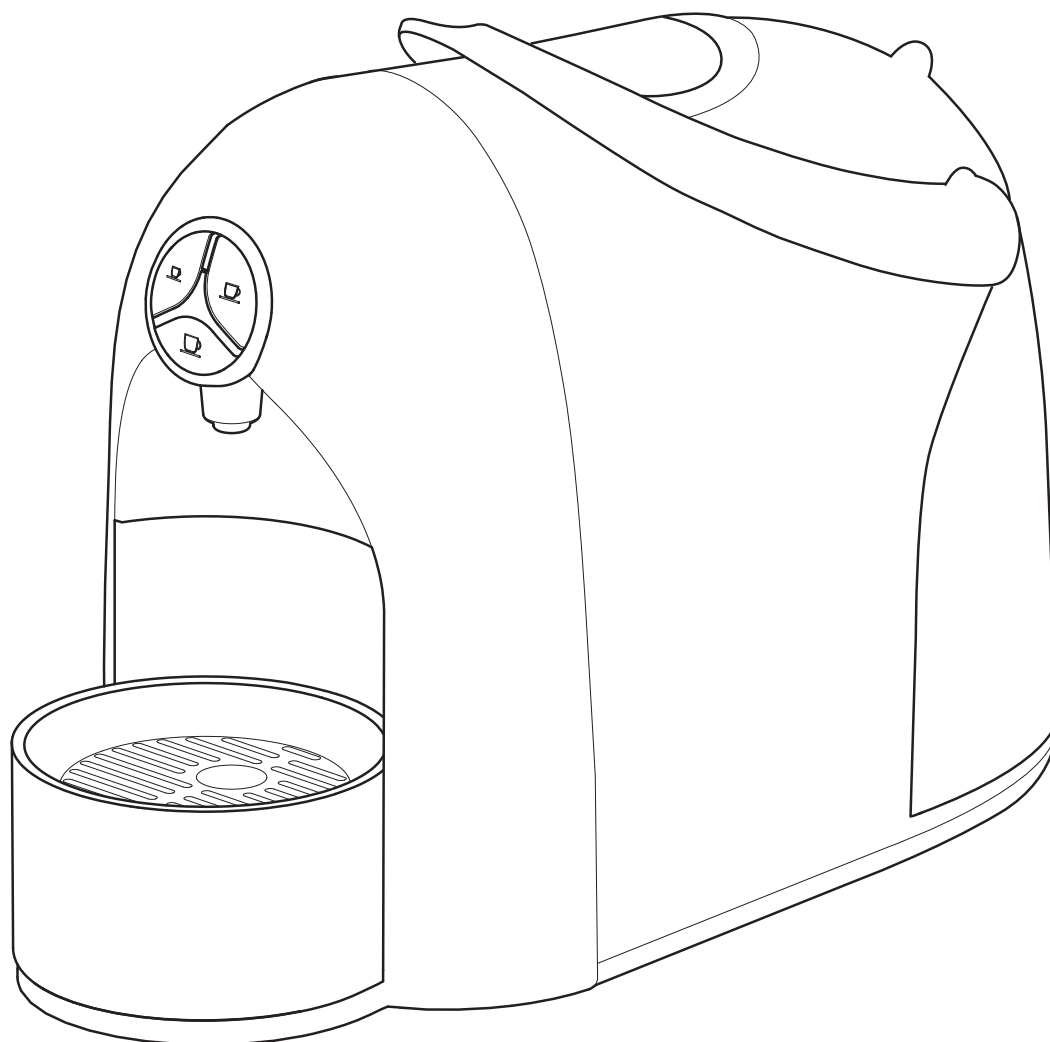

**Imported by Maranatha Import Export Pty Limited
Unit 33 / 9 Hoyle Avenue, Castle Hill, N.S.W. 2154
Phone: 02 9894 6247**

**E-Mail: info@maranathaimport.com.au
Web Site Contact: www.caffitalysystem.com.au**

INDEX

Instructions:

• Follow the instructions - Symbols	2
• Your Caffitaly System contact	2
• Machine Elements	3
• Safety warnings	4
• Instructions for use and disposal	5
• First use or after a long period of no operation	5
• Dispensing coffee	6
• Correct use of the buttons	6
• Programming the quantity of coffee in a cup	7
• Turning on the appliance	7
• General operating indications	8
• Adjusting the cup/mug height	8

Cleaning and Maintenance:

• Saving energy	9
• Daily maintenance	9
• Descaling	9
• Descaling instructions	10

Miscellaneous:

• Restore original settings (RESET)	10
• Troubleshooting	11
• Technical data	11

Dear Customer, Thank you for having chosen our product and for your confidence in our company. You can savour your favourite hot beverages at any time of the day with our appliance by choosing one of the capsules that Caffitaly System offers you. For example: an espresso, a cocoa-flavoured beverage or a tea will be ready in just a few seconds.

Follow the instructions (Symbols)

CAUTION.



This is the safety warning symbol.

It is used to call your attention to possible risks of personal injury.

Abide by the safety messages provided in order to avoid possible injury or death.



NOTE.

This is the symbol used to highlight some actions that will optimise the use of this appliance.



Not dishwasher safe



Maintenance tips


Your Caffitaly System contact

info@maranathaimport.com.au

Ph: 02 9894 6247

Website: www.caffitalysystem.com.au

Machine Elements

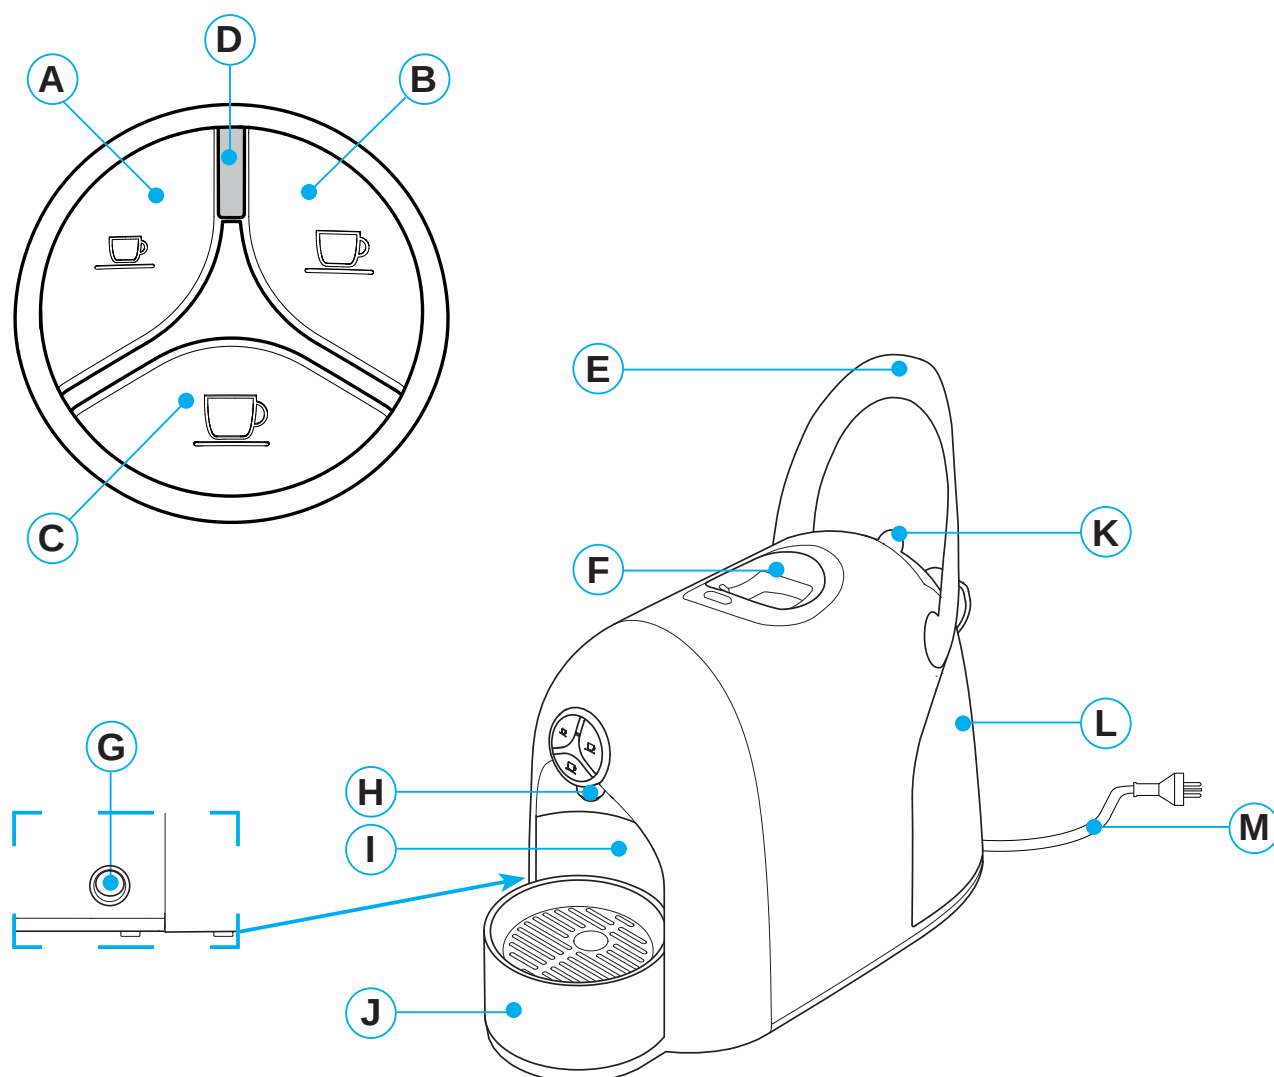

- A: "Espresso (30ml)" button;
- B: "Double Espresso (60ml)" button;
- C: Tea button; (can also be used for Hot water)
- D: "Multifunction" indicator light.
- E: Lever for opening and closing capsule compartment;
- F: Capsule compartment;
- G: Power on/off switch;
- H: Dispensing spout;
- I: Used capsule drawer;
- J: Drip tray;
- K: Water tank cover;
- L: Water tank;
- M: Power cord;

Safety warnings

Carefully read the **following** instructions. In this way you will avoid the risk of personal injury and damage to the appliance.

- This appliance is intended to be used in domestic and similar applications such as, for example: staff cooking areas in shops, offices and other work environments; holiday farms; by guests staying at hotels, motels and other residential facilities; facilities like bed and breakfasts.
- Use only Caffitaly System capsules.
- Use of the appliance in any manner other than as directed herein could cause harm to persons and void the guarantee. The manufacturer will not be responsible for injury or damage resulting from improper use of the appliance.
- After removing the packaging, check that the appliance is not damaged. If damage is detected, or upon the first sign of a defect (unusual noise or odours), or if any other problem is detected inside the appliance, do not use it and contact the Maranatha Customer Service line on 02 9894 6247 or return to your store of purchase.
- The packaging elements (plastic bags, etc.) must not be left within reach of children as they are potential sources of danger.
- Only use the appliance if the power cord is intact. If the cord is damaged, it should be replaced due to potential electrical safety risks. Contact the Maranatha Customer Service Line on 9894 6247 or return to your store of purchase.
- Use and store the appliance indoors. Make sure the electrical elements, plug and cord are dry. Never submerge the appliance in water. Protect the appliance from sprays and drips. Water and electricity together constitute a risk of electrocution.
- Only connect the appliance to power outlets complying with the requirements of the law. Make sure that the power supply voltage matches the rating shown on the data plate on the bottom of the appliance.
- Install the appliance on a solid, stable, heat resistant surface with an incline no greater than 2 degrees.
- Do not allow the appliance to be used by children or people with impaired mental, physical or sensory faculties or insufficient experience and/or skills, unless they are under the careful supervision and guidance of a person responsible for their safety. Children play with the appliance.
- Do not leave the power cord near hot surfaces, sharp edges or other sharp objects.
- Never place your hands inside the capsule compartment. There is a danger of injury.
- Do not open the lever while the appliance is operating.
- Do not remove parts of the appliance, OR insert objects into the openings. This could cause electric shocks! Any operation that is not described in this instruction manual should only be performed by an Authorised Support Centre. Please contact the Maranatha Customer Service line on 02 9894 6247
- Do not pull on the power cord to disconnect it. Remove the plug carefully to avoid damage to the outlet.
- Descale the appliance, following the instructions provided (see section on Descaling). If you do not, the appliance may be damaged.
- Clean the appliance carefully and regularly. If it is not cleaned, the build-up that forms may be hazardous to your health. Unplug the appliance and allow it to cool before cleaning.
- Unplug the machine if you do not expect to use the appliance for a long period of time (leaving on vacation, etc.).

Instructions for use and disposal



The appliance has been manufactured using high quality materials that can be reused or recycled. Dispose of the appliance in a suitable waste collection centre.



First use or after a long period of no operation

- Fill the tank with fresh, still water (either by filling through the water tank cover or removing the water tank).
- Plug in the appliance and turn it on.
- Make sure the lever is closed.
- Along with the **A-B-C** keys, the **D** indicator light will also alternately blink **RED**.
- Place a large container (at least 250 ml) under the coffee dispensing spout.
- Press one of the buttons A-B-C. Wait for the machine to complete the priming cycle and fill with water (you will hear the pump noise during this period). The **D** indicator light switches off.



NOTE: If the buttons **A-B-C** and the **D** indicator light continue to blink after the filling procedure has ended, repeat the steps in previous point.

- When the buttons **A-B-C** blink at the same time; the machine is warming up.
- When the buttons **A-B-C** turn on and remain steadily lit, rinse by pressing the **C** button. Press the button again to rinse a second time. Wait for the machine to complete the rinse cycle.
- At the end of this operation, empty out any water from the used capsule drawer.

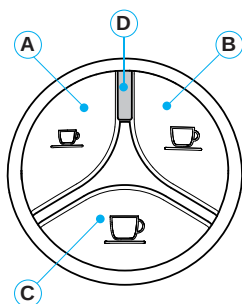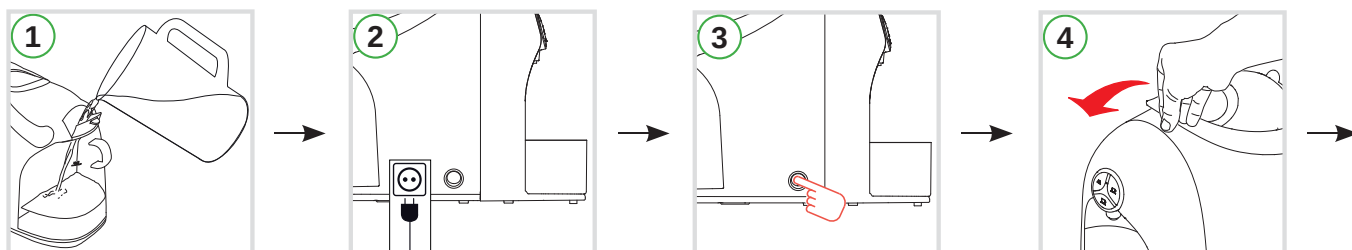


Dispensing coffee - Using Factory Settings

- Raise the lever to open the capsule compartment.
- Insert the capsule, pressing it gently into place.
- Close the lever fully.
- Place a cup or mug under the coffee dispensing spout.
- **Press and release** the button **A**, **B** or **C** corresponding to the type of coffee you want
A- Single Shot Espresso
B- Double Shot Espresso
C- Tea/Hot Water (Low pressure).
(Capsules appropriate for the C button will be noted on the packaging).
- The selected coffee button will blink. The appliance will stop dispensing on reaching the programmed quantity and will emit a beep.
- Raise the lever to eject the used capsule into the drawer.
- Close the lever.



NOTE: The quantities of coffee dispensed can be programmed according to personal taste and the size of the cups or mugs used.
Please refer to chapter "Programming the quantity of coffee in a cup".

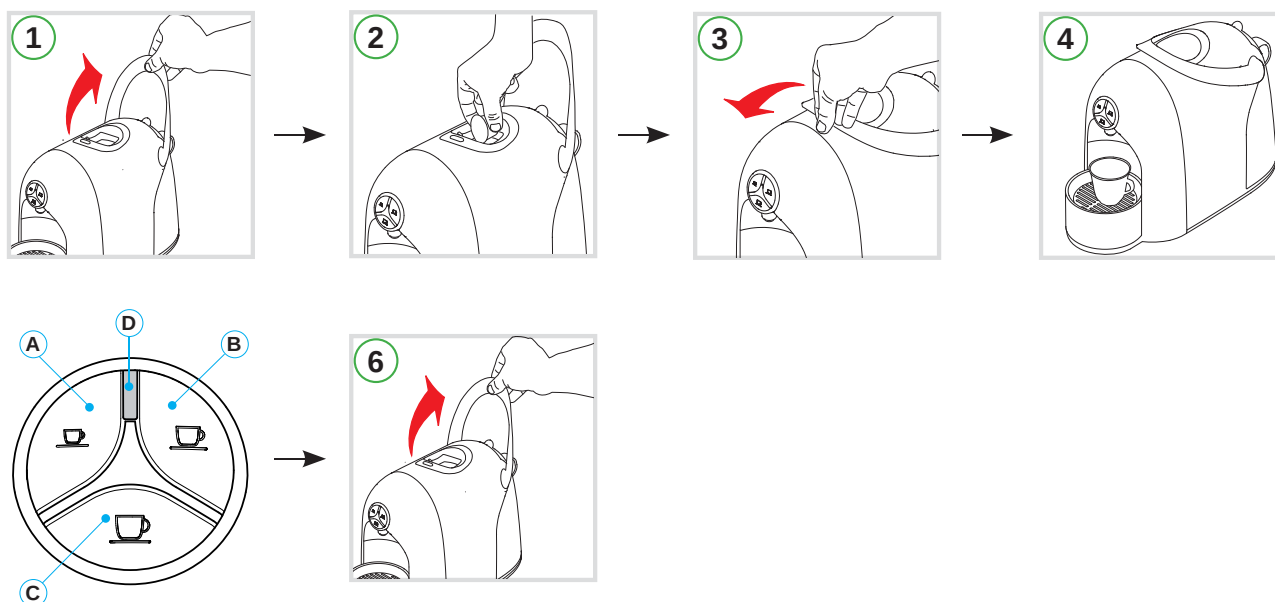

Correct use of the buttons

To dispense single or double espresso shots, use the **A** or **B** buttons only (lit up in **WHITE**). The same buttons, depending on the amount required, should also be used to dispense cocoa (Follow the specific instructions on the capsule box).

The **C** button (lit in **BLUE**) should only be used for **Tea** capsules (it can also be used for just hot water).

Do not use the C button for espresso coffee: when operating in this mode, the machine is actually set to a low pressure which reduces crema, weakens the taste of the coffee and could cause interruptions in flow as the product is dispensed.



(Capsules appropriate for the C button will be noted on the packaging).



NOTE: Traces of the product just dispensed may remain in the circuit of the machine. When switching from one product to another, in order to fully enjoy the flavour of the beverage we suggest rinsing the machine by pressing the any one of the buttons as if to dispense a coffee without inserting a capsule.


Programming the quantity of coffee in a cup

- Raise the lever to open the capsule compartment.
- Insert the capsule, pressing it gently into place.
- Close the lever fully.
- Place a cup or mug under the coffee dispensing spout.
- **Press and hold** the desired coffee button (Through the entire cycle).
- On reaching the desired amount of coffee, release the button. Now the button is programmed.
- **The quantity of coffee dispensed may be programmed, from a minimum of 30 ml to a maximum of 250 ml.**
- **Recommended Programming/Current Programming:**
 - 30ml: Espresso (30ml)
 - 60ml: Double Espresso (60ml).
 - 120 ml: Tea and Hot Water (Maximum 250ml).

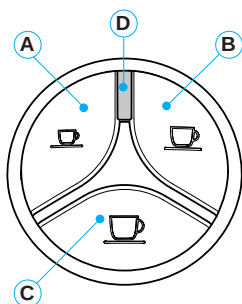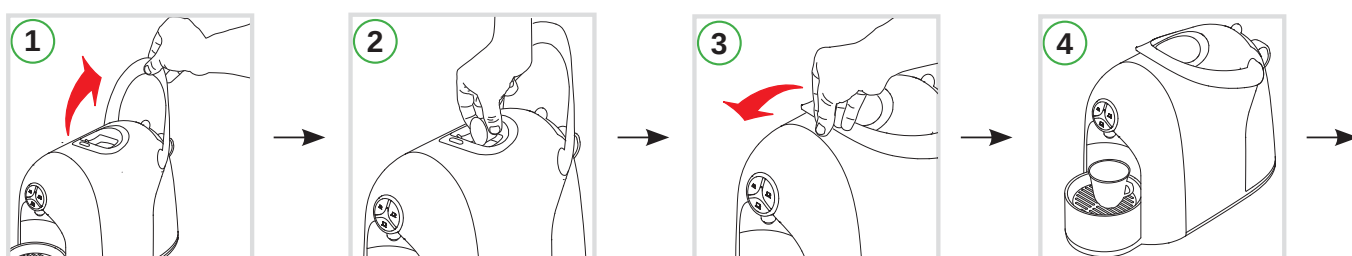

Turning on the appliance - Daily & Regular Usage

- Fill the tank with fresh, still water.
- Turn on the machine by pressing the On/Off Button.
- The buttons **A-B-C** blink at the same time; the machine is warming up. When the buttons turn on and remain steadily lit, the appliance is ready for use.

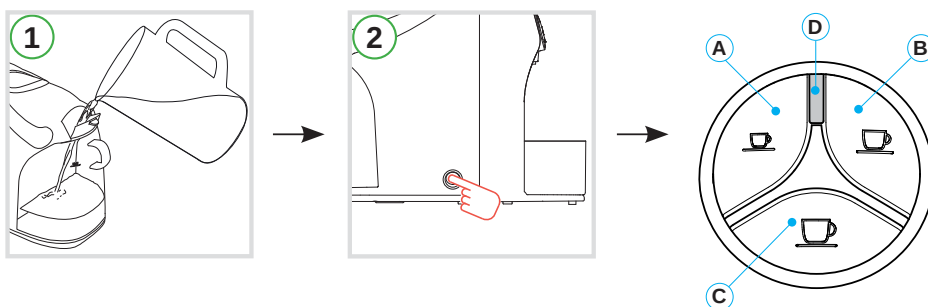

General operating indications

DESCALING SIGNAL:

- When the **D** blinks **YELLOW/ORANGE** and the machine emits 3 beeps (after which it will remain lit), it is advisable to perform the descaling cycle. (See section: **Descaling**)

HEATING (This will typically take 45-50 sec):

- The buttons **A-B-C** blink at the same time.

WHEN THE WATER RUNS OUT DURING OPERATION:


- The water tank is empty when the **D** indicator light blinks **RED** and the appliance emits 3 beeps.
- Fill the tank with fresh, still water.
- Press one of the buttons **A-B-C**. Wait for the machine to complete the priming cycle and fill with water.
- When the buttons **A-B-C** turn on and remain steadily lit, the appliance is ready for use.

IF THE LEVER IS RAISED:

- If the lever is raised during the delivery of a product, the machine can emit jets of hot water. **Risk of burns!**
- The **D** indicator light blinks **RED** and a beep is emitted. The appliance will immediately stop dispensing.
- Close the lever.
- Press a button **A-B-C** to reset the alarm.
- The appliance is ready for use.

Adjusting the cup / mug height

- The appliance can be adjusted for the use of mugs or espresso cups.
- The appliance is initially set for the use of large cups or mugs.
- For best results using the cups, you have to lift and rotate the grid placed over the drip tray.
- For very tall mugs/latte glasses the drip tray can be removed.

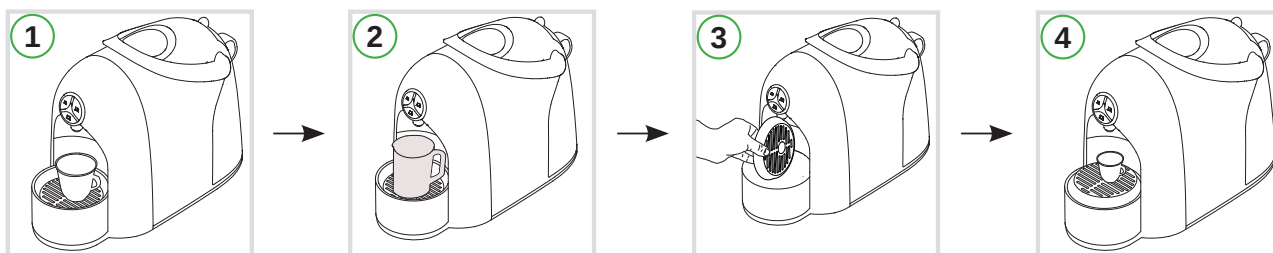

Saving energy



The machine will automatically reduce consumption one hour after the last use. The buttons **A-B-C** will slowly and sequentially blink with a WHITE light. To restore normal operating conditions, press any button or raise the lever. The appliance will start warming up. When the buttons A-B-C turn on and remain steadily lit in WHITE, the appliance is ready for use.

Daily maintenance

- Remove the drip tray and used capsule drawer.
- Pull out the capsule drawer; empty and rinse it.
- Remove the grid. Empty the drip tray and rinse it out with water.
- Remove the water tank. Empty and rinse out the tank. The water tank is NOT dishwasher safe.



Use a soft cloth and a neutral detergent to clean the surfaces of the appliance. Do not use jets of water to clean the appliance.



The plastic parts of the appliance are not dishwasher safe.

Descaling

Descaling signal: When the **D** blinks **YELLOW/ORANGE** and the machine emits 3 beeps, it is advisable to perform the descaling cycle, as illustrated below.




The machine features an advanced program that monitors how much water is used to dispense beverages. This measurement provides the user with indications as to when the machine needs to be descaled.



CAREFULLY read the directions for use on the package of the descaling agent. Avoid contact with eyes, skin and machine surfaces. Switch the appliance off during descaling, and do not lift the lever. A person must be present during the operation. **Do not use vinegar: it could damage your appliance**

Descaling instructions

- Begin with Machine Off, Empty and rinse used capsule drawer and drip tray, and lower lever.
- Remove and empty the water tank.
- Mix 125ml of the Cafetto Organic Descaling agent and 625ml of water (to make 750ml of solution), add to water tank and replace.
- Place a container (at least 750ml) under the coffee dispensing spout.
- Press and hold the buttons A - B and at the same time turn on the machine (B Button will be on and D light will blink).
- Press the B button to start the descaling cycle.
- The appliance will dispense the descaling solution at intervals:
 - 5 doses with a 4 minute pause between each one, Total time approx 25 minutes.
 - Buttons must not be pressed, the D indicator light blinks alternately
- When the first step is complete, the B button lights up beeps twice. The water tank is empty.
- Rinse water tank and fill it with fresh drinking water to max line.
- Empty and rinse used capsule drawer, the drip tray and container & replace.
- Press the B button to start the rinse cycle.
- Rinse water (about 500 ml) will be run through the appliance.
- When the rinse cycle is complete, the machine beeps and A-B-C buttons will blink at the same time; (machine warming up).
- When the buttons turn on and remain steadily lit, the appliance is ready for use.
- Rinse water tank and fill it with fresh drinking water.
- Empty and rinse used capsule drawer, the drip tray and container & replace.

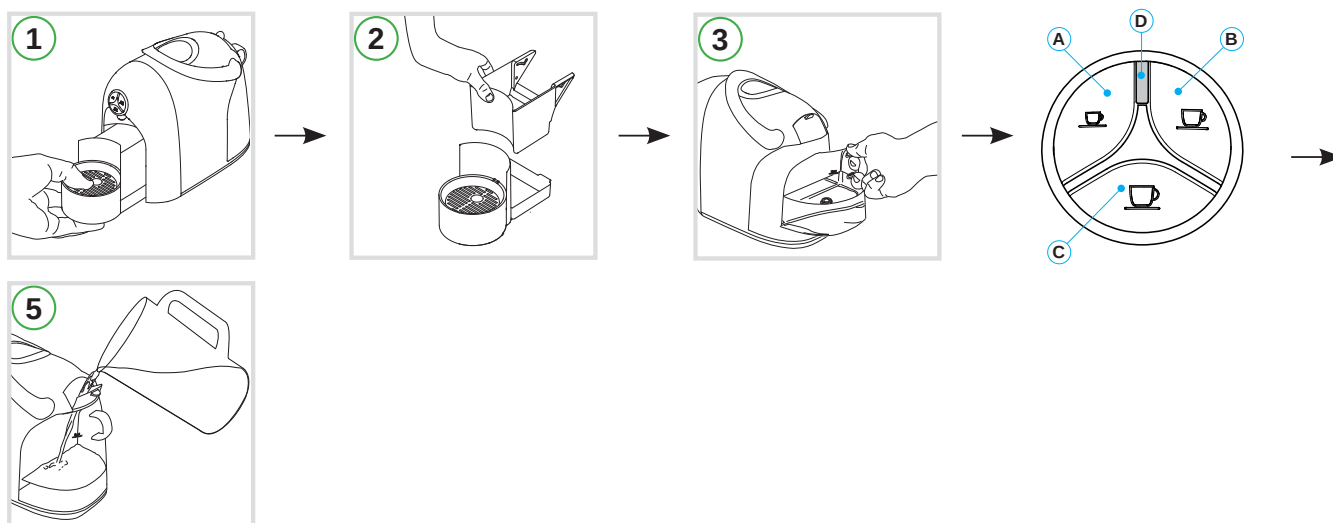

Restore original settings (RESET)

These instructions, allow you to reset the machine back to its factory settings – Helpful if you experience an issue with the machine, or you have changed the pour levels for example and cannot change them back to their original levels.

The reset of the machine can be done with the following procedure:

1. Start with machine OFF.
2. Start with silver handle up.
3. Hold down Espresso button (A button. Top left / white button).
4. While still holding down the A Button - Switch ON and then, after 1sec, close and open the silver handle,
5. 5 beeps is signaling that the reset has been done; then release the espresso button.

NB: At the end of this procedure, machine is driven in 1st use state and you will need to go back and perform the first use procedures.



If you try to reset after experiencing a problem with the machine, this may not always solve the problem. If this is the case, please contact the Maranatha Customer Service line 02 9894 6247 or return to your store of purchase.

Troubleshooting

PROBLEM	CAUSE	SOLUTION
No coffee is brewed. The D indicator light blinks RED .	- The water tank is empty. - Incorrect use of capsules with C button.	- Fill the tank with fresh water. - Press a button to reload the circuit. When the buttons remain steadily lit, the appliance is ready for use. - Only Tea Capsules and hot water to be used with C Button.
The coffee is not hot enough.	- Cold cups / mugs. - Scale build-up in machine.	- Preheat the cup. - Descale the machine.
The lever cannot be lowered.	The used capsule drawer is full. Capsule stuck inside the machine.	Empty out the used capsule drawer. Remove the jammed capsule.
The D indicator light is on and steadily lit in RED .	Heating problems.	Contact the Maranatha Customer Service line 02 9894 6247 or return to your store of purchase.
When a coffee dispensing button is pressed, the machine seems to start running, but stops without dispensing coffee or after dispensing only a small amount.	Incorrect quantity programming.	Reprogram the quantity corresponding to that button. See ch. "Programming the quantity of coffee in a cup".
A very small amount of coffee is dispensed very slowly.	The C button has been used with an espresso capsule.	Use the A or B Button.

Technical data

	See the data plate on the base of the machine.
	Max. 15 bar
	< 70dB A
	Approx. 4 kg
	1,2 litres
	ambient temperature: 10°C ÷ 40°C
	170 mm 280 mm 350 mm

The materials and objects in contact with food products comply with the requirements of European Regulation 1935/2004.



IB1400100 - Rev.02 del 20-03-13